




This document contains technology subject to the Export Administration Regulations (15 C.F.R. Parts 730-774). A prior authorization or license from the U.S. Department of Commerce, Bureau of Industry (and Security (BIS) is required prior to the export, re-export, release, or transfer of this document to a non-U.S. person whether in the United States or abroad.

SL STOCK - HK94/MP5®

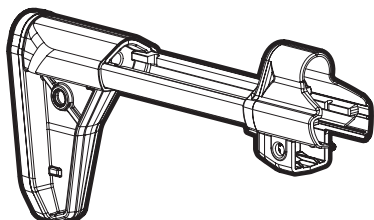

MAG1250 - SL Stock - HK94/MP5®

READ ALL INSTRUCTIONS BEFORE
PROCEEDING TO AVOID LOSING
ANY SMALL COMPONENTS

INSTALLATION INSTRUCTIONS


! WARNING: BEFORE STARTING, MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY, AND THE SAFETY ENGAGED.

! WARNING

Compatible with HK94/MP5®/SP5® pattern pistols.

NOT compatible with HK91/G3® pattern firearms.


NOT compatible with "K-length" receivers.

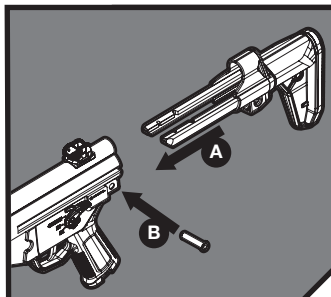

STEP 2: INSTALL STOCK


DO NOT FORCE PARTS TOGETHER!

(A) Align the SL Stock Endcap with the rear of the receiver and gently slide together until the locking pushpin holes line up. (B) Insert locking push pin.

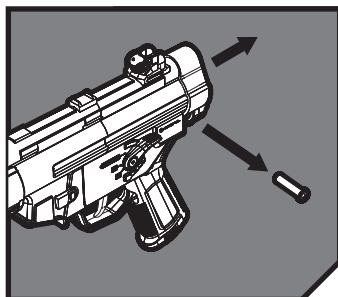

STEP 1: REMOVE EXISTING ENDCAP/STOCK

Remove the *locking push pin*, and the existing *endcap/stock*.

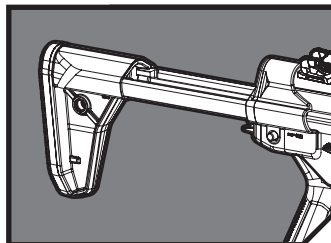

STEP 3: VERIFY INSTALL

Perform final inspection including function test per firearm user manual to verify correct installation. Always test fire your weapon before using it in an operational environment.